GIVI MISUR	e
------------	---

GIVI MISURE s.r.l. Via Assunta 57 - 20054 NOVA MILANESE (MI) ITALY TEL.+39 0362.36.61.26 FAX +39 0362.36.68.76 www.givimisure.it sales@givimisure.it


Code	Project	Release	Title
<i>ST24</i>	А25-В	В	TECHNICAL DATASHEET

# MAGNETIC BAND MP200

## **GENERAL FEATURES**

- MAGNETIC BAND MP200 is composed of a magnetic strip which is polarized at regular distances of 2+2 mm and supported by a stainless steel carrier. Extremely easy to mount on the operating machine.
- As an optional, the magnetic band can be supplied with a non-magnetic stainless steel cover for protection purposes; for its fixing an adhesive tape is pre-mounted.



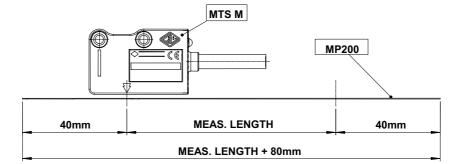


IMPORTANT: in order not to compromise the accuracy of the system, the magnetic band MP200 must be longer than the machine run of at least 40 mm from each side.

MECHANICAL FEATURES		
Pole pitch	2+2 mm	
Accuracy at 20°C	± 30 μm/m <b>standard</b> ± 15 μm/m <b>special</b>	
Width	10 mm	
Thickness	1.3 mm	
Maximum length	50 m	
Thermal expansion	10.5 x 10 <sup>-6</sup> °C <sup>-1</sup> T ref. = 20°C ± 0.1°C	
Bending radius	130 mm <sub>MIN</sub>	
Operating temperature	0° ÷ 70°C	
Storage temperature	-20° ÷ 80°C	
Weight of magnetic band	65 g/m	
Weight of cover	25 g/m	

## ORDERING CODE


MODEL	LENGTH (mm)
MP200	xxxxx


Example  $\bigcirc$  MAGNETIC BAND MP200 11000

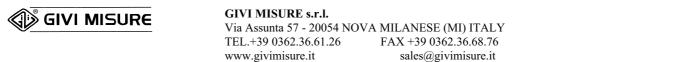

Code	Project	Release	Title
<i>ST24</i>	А25-В	В	TECHNICAL DATASHEET

#### ACCESSORIES

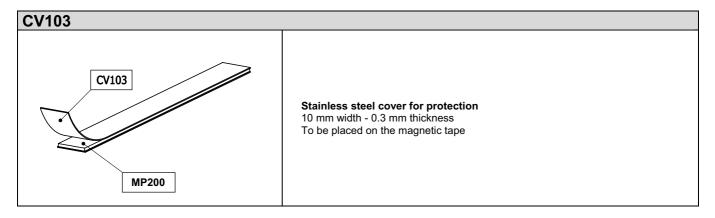

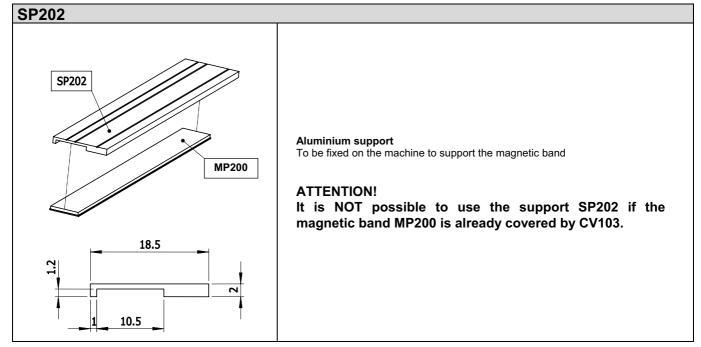

## **ORDERING CODE OF ACCESSORIES**

MODEL	LENGTH (mm)
CV103	ххххх
SP202	xxxxx

#### **INSTALLATION AND HANDLING**

Degrease the surface you want to place the magnetic band by using alcohol and dry it carefully. 1.

Place the band and keep it aligned with the reader head ensuring the magnetic part is just next to the sensor. 2.

3. 4. 5. Place the cover CV103 or the support SP202, if provided.

- The max. adhesion will be achieved after 48 hours from sticking.
- Keep other magnetic parts clear from the tape.

6. Store and roll up the tape keeping the magnetic strip on the outside, in order to avoid tensions.